

Programming Your Remote ~ Amino Remote Control

In order for the remote to transmit the correct signals to control the TV, the remote must be programmed with a 3-digit code corresponding to the type of TV in use. This is done in the following way:

- Identify the make of the TV that is in use. E.g. Sony, Magnavox etc.
- Find the TV make listed in the branding table in Appendix A.
- Simultaneously press and hold the TV and OK buttons on the remote.
- After approximately 2 seconds, the TV button will light.
- Release the TV and OK buttons – the TV button remains illuminated.
- Now enter the 3-digit brand code according to the make of the TV that is being controlled.
- As each of the digits are entered, the TV button will briefly flash off and on again
- When the third digit has been entered, the TV button will go out.
- If a TV brand code has been entered that the remote does not recognize, the TV button will flash rapidly for a second and remain illuminated. If this happens, re-enter the correct TV brand code.
- Verify that the remote control works with the TV.

Most TV makes have more than one brand code listed in the brand code table – if this is the case try all brand codes that are listed for that make until a suitable match is found.

If no brand code is listed for the TV, try brand codes for Philips and NEC TVs.

TV Brand Codes

A TANDY 094
ABEX 115
ADMIRA 114, 127, 200
ADVENTURA 113
AIKO 105,112, 197
AIWA 148
ALARON 109, 217
AKAI 033, 110, 111, 149, 157
ALBA 043
ALLERON 109
AMBASSADOR 108
AMERICA 105
AMPRO 234
AMSTRAD 048, 108
ANAM 025, 104, 105, 106, 107
ANAM NATIONAL 104, 214
AOC 036, 041, 102, 103, 111, 116
APEX 062
ARCHER 116
AUDIOSONIC 100
AUDIOVOX 105, 116, 197, 199
BAUER 044
BAUR 100
BAYSONIC 105
BEIJING 151, 155, 156
BELCOR 036, 103, 157
BELL & HOWELL 038, 098, 099
BEON 100
BRADFORD 105
BROCKWOOD 036, 103
BROKSONIC 083, 116, 200
BUSH 100
CANDLE 035, 036, 041, 096, 097, 111, 113, 215
CAPEHART 102
CARNIVALE 041, 157
CARVER 010, 163, 213
CATHAY 100
CELEBRITY 095, 195, 232
CENTURION 041
CHANGHONG 154, 155, 156, 162
CINERAL 105, 197, 199
CITIZEN 035, 036, 041, 092, 093, 094, 096, 097, 105, 111,112, 113, 149, 197, 215
CLAIRTONE 101
CLARIVOX 100
CONCERTO 035, 097, 215
CONROWA 175
CONTEC 090, 091, 101, 105
CORANDO 094
CRAIG 025, 105
CROSLEY 163, 213
CROWN 094, 105
CURTIS MATHES 016, 036, 038, 041, 055, 069, 075, 093, 094, 098,111, 114, 127, 149, 163, 196, 198, 212, 213, 215, 219, 228, 229, 231, 233
CXC 105
DAEWOO 029, 030, 033, 036, 072, 094, 100, 103, 105, 112,119, 153, 157, 158, 159, 160, 199, 197
DANSAI 100
DAYTRON 036, 094, 103
DENON 069
DECCA 027, 100
DIXI 033, 100, 107
DUMONT 001, 036, 089, 103
DWIN 076
DYNATECH 088
ELECTROBAND 095, 101, 195, 232
ELECTROHOME 094
ELECTRON 094
ELIN 100
ELTA 033
EMERSON 000, 002, 006, 007, 008, 009, 011, 036, 038, 041, 048, 081, 082, 083, 084, 085, 086, 087, 090, 092, 094, 098, 101, 103, 105, 108, 109, 200, 217
ENVISION 036, 041, 111

ERRES 100
ETRON 033
FERGUSON 100
FINLUX 100
FISHER 017, 038, 080, 098
FORMENTI 044
FORMONTI 100
FORTRESS 114
FUJITSU 109, 217, 224
FUNAI 048, 105, 109, 141, 150, 152, 217
FUTURETECH 105
GE 013, 016, 020, 036, 041, 075, 076, 077, 078, 079, 081, 086, 104, 114, 127, 196, 199, 212, 214, 228, 229, 231, 233
GEC 027, 100
GEMINI 039
GENEXXA 043
GIBRALTER 089, 103, 111
GOLDSTAR 024
GOODMANS/TASHIKO 027, 066, 100
GRADIENTE 028, 065, 157, 215
GRANADA 100
GRUNDIG 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188
GUNPY 105, 109, 217
H/K 072
HALLMARK 036, 041, 086
HANSEATIC 100
HARLEY Davidson 109, 217
Harman/Kardon 163, 213
HARVARD 105, 106
HINARI 100, 109
HITACHI 018, 035, 067, 068, 069, 070, 071, 087, 094, 097, 135, 215
HYPSON 100
IMA 105
INDIANA 100
INFINITY 163, 213
INFINITY REFERENCE 010
INTERFUNK 100
INTEQ 001, 089
ITT 061
JANEIL 113
JBL 010, 163, 213
JCB 095, 195, 232
JENSEN 031
JINXING 153, 154, 155, 156, 157, 162, 163, 164, 165, 169, 173
JVC 026, 028, 064, 065, 066, 084
KAWASHO 090
KAYPANI 102
KEC 105
KENWOOD 036, 041, 103, 111
KLOSS 063, 072, 113
KONKA 221, 222, 225, 226
KTV 041, 092, 094, 101, 105, 111
LEYCO 100
LG(GOLDSTAR) 003, 012, 035, 036, 041, 073, 074, 086, 094, 097, 100, 103, 111, 115, 215
LIESENK & TTER 100
LLOYTRON 094
LOEWE 100
LOGIK 099, 177
LUXMAN 035, 097, 215
LXI 010, 036, 038, 041, 062, 076, 086, 098, 163, 196, 213, 228, 233
MAGNAVOX 010, 034, 039, 040, 041, 042, 058, 059, 060, 061, 063, 066, 096, 111, 163, 213, 217, 218, 230
MAJESTIC 099
MARANTZ 010, 022, 036, 041, 100, 111, 213
MARK 100
MATSUSHITA 019
MATSUI 027, 033, 100
MEDIATOR 100
MEGATRON 036, 041, 069, 086, 116
MEI 101
M-ELECTRONIC 100
MEMOREX 022, 033, 036, 038, 041, 057, 086, 097, 098, 099, 177, 215, 217

METZ 179, 183, 189, 190, 191, 192, 193, 194
MGA 022, 036, 056, 041, 057, 086, 103, 111
MIDLAND 001, 019, 075, 076, 089, 094, 115, 200, 212, 228, 233
M-ELECTRONIC 075, 089, 196
MINUTZ 079
MITSUBISHI 022, 032, 036, 056, 057, 066, 079, 086, 103, 110, 114, 138
MONTGOMERY 109
MOTOROLA 022, 041, 104, 114, 127, 157, 214
MTC 035, 036, 041, 088, 093, 097, 101, 103, 111, 149, 215
MULTITECH 088, 105, 127
NAD 036, 055, 062, 086, 105
NEC 024, 035, 036, 041, 066, 097, 103, 105, 111, 132, 171, 215
NECKERMANN 100
NEI 100
NIKKAI 027, 043, 100, 115
NIKKO 036, 041, 086, 105, 111, 112, 197
NOSHI 053
NOVABEAM 072
NTC 105, 112, 157
ONWA 041, 105, 157, 197
OPTIMUS 038, 055, 105
OPTONICA 019, 054, 098, 114, 198
ORION 000, 083, 100, 127, 200, 217
OSAKI 027, 115
OTTO VERSAND 100
PANASONIC 010, 019, 025, 075, 083, 104, 109, 131, 137, 143, 200, 212, 214
PANDA 154, 172
PENNY 016, 019, 036, 041, 052, 053, 062, 073, 075, 076, 078, 079, 086, 093, 094, 103, 104, 111, 115, 116, 212, 215, 228, 231, 233
PEONY 156, 162
PHILCO 036, 041, 058, 059, 060, 061, 062, 063, 069, 075, 079, 096, 103, 111, 149, 157, 196, 213
PHILIPS 010, 040, 069, 100, 157, 163, 200, 213
PHILIPS MAGNAVOX 010, 048
PHONOLA 100
PILOT 010, 036, 041, 094, 103, 111, 163
PIONEER 051, 055, 087, 157, 223
PORTLAND 036, 094, 103, 105, 112, 198
PRICECLUB 093
PRINCETON 227
PRISM 075, 157, 197, 212
PROSCAN 075, 076, 228, 233
PROTECH 100
PROTON 036, 050, 086, 094, 102, 116, 196, 219
PULSAR 001, 036, 041, 089
PULSER 103
QUASAR 025, 075, 089, 104, 131, 157, 212, 214
QUELLE 100
RADIO SHACK 036, 041, 038, 054, 075, 094, 103, 105, 112, 115, 127, 157, 196, 215, 228, 233
RADIOLA 100
RCA 005, 014, 015, 018, 019, 036, 041, 049, 053, 075, 076, 077, 087, 103, 114, 199, 212, 216, 223, 228, 229, 233, 231, 235, 236, 237
REALISTIC 036, 038, 041, 054, 086, 094, 097, 098, 103, 105, 111, 115, 157, 196, 215
RHAPSODY 101
R-LINE 100
RUNCO 001, 041, 089, 098, 105, 111, 157, 220
SAISHO 033, 108
SAMPO 036, 041, 094, 102, 105, 111, 115
SAMSUNG 033, 034, 035, 036, 041, 086, 093, 094, 097, 100, 103, 111, 115, 149, 215
SAMSUX 094
SANSEI 199
SANSUI 200
SANYO 017, 023, 027, 038, 066, 080, 091, 098, 123, 125, 126, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211
SBR 100
SCHEIDER 100
SCIMITSU 036, 103, 157
SCOTCH 036, 041, 086
SCOTT 036, 041, 083, 086, 094, 103, 105, 109, 217
SEARS 010, 016, 017, 035, 036, 038, 041, 048, 052, 062, 076, 080, 086, 097, 098, 109, 141, 163, 196, 213, 215, 217, 228, 233

SEMIVOX 105
SEMP 062
SHANGHAI 156, 168
SHARP 046, 047, 054, 066, 091, 091, 111, 114, 127
SHOGUN 036, 103, 157
SIGNATURE 099, 177
SIMPSON 058, 096, 218
SOLAVOX 115
SONOKO 100
SONTEC 100
SONY 037, 045, 066, 084, 095, 128, 144, 195, 232
SOUNDESIGN 036, 041, 086, 096, 105, 109, 217
SOUNDWAVE 100
SPECTRICON 116
SQUAREVIEW 048, 141
SSS 036, 089, 103, 105, 157
STAR-LITE 105
SUPREM 095, 195, 232
SUPRE-MACY 113
SURPA 035, 097
SYLVANIA 010, 036, 041, 044, 048, 058, 059, 060, 061, 063, 066, 096, 111, 157, 163, 213
SYMPHONIC 048, 141
SYSLINE 100
TANDY 027, 043, 114, 127
TATUNG 027, 088, 100, 104, 116, 214
TCL 156, 163, 170
TECHNOL ACE 109, 217
TECHNICS 019, 075, 212
TECHWOOD 035, 075, 097, 157, 212, 215
TEKNIKA 010, 022, 035, 036, 057, 093, 094, 096, 097, 099, 103, 105, 109, 112, 113, 157, 163, 177, 197, 213, 215, 217
TELEFUNKEN 157, 215
TELETECH 033
TERA 050
THAKRAL 167
THORM 100
TMK 035, 036, 041, 086, 097, 108, 215
TNCI 001
TOSHIBA 038, 052, 062, 066, 093, 098, 130, 149
TOSONIC 101
TOTEVISION 094
TRICAL 091
TRUTECH 036, 119
UNIVERSAL 078, 079
UNIVERSUM 100
VECTOR RESEARCH 036, 041, 111
VESTEL 100
VICTOR 028, 065
VIDEO CONCEPT 110
VIDIKRON 010, 021, 163, 213
VIDTECH 036, 041, 086, 103
VIKING 113
WARDS 010, 036, 041, 045, 054, 058, 059, 060, 061, 077, 078, 079, 086, 097, 099, 103, 109, 111, 177, 213, 215, 217
WATSON 100
WHITE Westinghouse 200
XOGEGO 161, 162, 166, 174, 176
YAMAHA 036, 041, 103, 111
YOKO 100
ZENITH 001, 004, 089, 099, 105, 177, 197, 200
ZONDA 116