

PROGRAMMING TV CONTROL – MILLENNIUM REMOTE

Locate the brand name of your TV in the *Setup Codes for TVs* in the next section, and write it in the space below.

TV Brand: _____

The brands are listed in alphabetical order with the most popular codes listed first. You will use one of these codes to program the Millennium 4 to operate your TV:

1. Turn on the TV.
2. On the Millennium 4, press **TV** once. Press and hold **SETUP** until the LED blinks twice, then release **SETUP**.
3. Enter the first four-digit code for your TV. If you perform this procedure correctly, the LED will blink twice.

NOTE: If the LED did not blink twice after entering the code's last digit, then repeat steps 2 through 3 and try entering the same code again.

4. Aim the Millennium 4 at your TV and press **POWER** once. The TV should turn off. If it does not respond, repeat steps 2-3, trying each code for your brand until you find one that works.
5. Write your TV code in the boxes below for future reference.

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
----------------------	----------------------	----------------------	----------------------

*NOTE: Remember, to use the Millennium 4 to operate your TV, press **TV** first.*

SETUP CODES FOR TVs:

AOC 0030, 0019
Admiral 0093, 0463
Aiko 0092
Akai 0030
Alaron 0179
America Action 0180
Anam 0180
Audiovox 0451, 0180, 0623, 0092
Baysonic 0180
Belcor 0019
Bell & Howell 0154, 0016
Bradford 0180
Brockwood 0019
Broksonic 0236, 0463
CXC 0180
Candle 0030, 0056
Carnivale 0030
Carver 0054
Celebrity 0000
Cineral 0451, 0092
Citizen 0060, 0030, 0056, 0092, 0280
Concerto 0056
Contec 0180
Craig 0180
Crosley 0054
Crown 0180
Curtis Mathes 0047, 0747, 0054, 0154, 0051, 0451, 0093, 0060, 0030, 0056, 0145, 0016, 0166
Daewoo 0451, 0019, 0623, 0624, 0092
Daytron 0019
Denon 0145
Dumont 0017, 0019
Electroband 0000
Emerson 0154, 0236, 0463, 0180, 0178, 0179, 0019, 0623, 0624, 0282, 0280
Envision 0030
Fisher 0154
Fujitsu 0179, 0683
Funai 0180, 0179, 0171
Futuretech 0180
GE 0047, 0747, 0051, 0451, 0093, 0178, 0021, 0282
Gibraltar 0017, 0030, 0019
GoldStar 0030, 0178, 0056, 0019
Gradiente 0053, 0056
Grunpy 0180, 0179
Hallmark 0178
Harley Davidson 0179
Harman/Kardon 0054
Harvard 0180
Hitachi 0056, 0145, 0016
Infinity 0054
Inteq 0017
JBL 0054
JCB 0000
JVC 0053
KEC 0180
KTV 0180, 0030, 0280
Kenwood 0030, 0019
Konka 0707, 0628, 0632, 0638, 0703
LG 0056
LXI 0047, 0747, 0054, 0154, 0156, 0178
Logik 0016
Luxman 0056
MGA 0150, 0030, 0178, 0019
MTC 0060, 0030, 0056, 0019
Magnavox 0054, 0030, 0179
Majestic 0016
Marantz 0054, 0030
Matsushita 0250
Megatron 0178, 0145
Memorex 0154, 0250, 0463, 0150, 0178, 0179, 0056, 0016
Midland 0047, 0747, 0017, 0051
Minutz 0021
Mitsubishi 0093, 0150, 0178, 0019
Motorola 0093
Multitech 0180
NAD 0156, 0178, 0166
NEC 0030, 0056, 0019
NTC 0092
Nikko 0030, 0178, 0092
Onwa 0180
Optimus 0154, 0250, 0166
Optonica 0093, 0165
Orion 0236, 0463, 0179
Panasonic 0051, 0250
Pennney 0047, 0747, 0156, 0051, 0060, 0030, 0178, 0021, 0056, 0019
Philco 0054, 0463, 0030, 0145, 0019
Philips 0054
Pilot 0030, 0019
Pioneer 0166
Portland 0019, 0092
Prism 0051
Proscan 0047, 0747
Proton 0178
Pulsar 0017, 0019
Quasar 0051, 0250, 0165
RCA 0047, 0747, 0090, 0051, 0093, 0019, 0278
RadioShack 0047, 0747, 0154, 0180, 0030, 0178, 0056, 0019, 0165
Realistic 0154, 0180, 0030, 0178, 0056, 0019, 0165
Runco 0017, 0030
SSS 0180, 0019
Sampo 0030
Samsung 0060, 0030, 0178, 0056, 0019
Sansei 0451
Sansui 0463
Sanyo 0154
Scimitsu 0019
Scotch 0178
Scott 0236, 0180, 0178, 0179, 0019
Sears 0047, 0747, 0054, 0154, 0156, 0178, 0179, 0056, 0171
Semivox 0180
Semp 0156
Sharp 0093, 0688, 0165
Shogun 0019
Signature 0016
Sony 0000
Soundesign 0180, 0178, 0179
Squareview 0171
Starlite 0180
Supreme 0000
Sylvania 0054, 0030
Symphonic 0180, 0171
TMK 0178, 0056
TNCi 0017
Tandy 0093
Technics 0051, 0250
Technol Ace 0179
Techwood 0051, 0056
Teknika 0054, 0180, 0150, 0060, 0179, 0056, 0019, 0016, 0092
Telefunken 0056
Toshiba 0154, 0156, 0060
Vector Research 0030
Victor 0053
Vidikron 0054
Vidtech 0178, 0019
Wards 0054, 0030, 0178, 0021, 0179, 0056, 0019, 0016, 0165
White Westinghouse 0463, 0623, 0624
Yamaha 0030, 0019
Zenith 0017, 0463, 0624, 0016, 0092